

## 2005-09 MUSTANG - HOOD BULGE and SPEARS

Dear Customer, this sheet is additional instructions and helpful information for the 2005-09 Mustang Hood Bulge and Spears: **#K228-S6 ONLY**. Please read all instructions also supplied with this kit.



Place decal on hood and mark with painters tape the side to side position. Make sure to get the decal exactly in the center of the hood.

Start 12" from the front nose of the decal and anchor the decal securely to the hood by squeegeeing.

Continue to squeegee towards the nose until it is done. Have a helper keep tension on the decal to eliminate and baggy areas.


Separate the 'Spear' stripes from the 'Center Bulge' decal before installing any piece in this kit.

After the nose section is completely squeegeed, continue to squeegee from the center to the windshield making sure to use plenty of application fluid. Always keep decal from bagging when you squeegee.



Spear decals, trim top application tape so decal will be flat around washer nozzles.

Install 'Spears' being careful of the forward placement. 'Dots' are for alignment and will be removed after decal is completely installed.

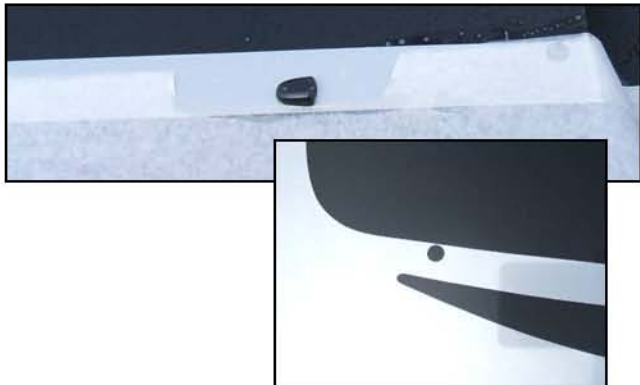

Install hood scoop and your done.



STRIPE KIT: #K228-S6-\*\*