




## 2005-2007 MUSTANG CONVERTIBLE LEMANS STRIPES - LOW SPOILER DELUXE 20 PC DUAL STRIPES - LOW SPOILER #K321-S6

Dear Customer, this sheet is additional instructions and helpful information for the 2005-2007 Mustang Lemans stripe kit #K321-S6 only. Please read all instructions on the application instruction sheet also supplied with this kit.

**FOR USE WITH:**  
**#W-7 LOW WING MODELS ONLY**  
**NOTE: STRIPE CENTER SPACE = 1 1/2"**


**STRIPES KIT: K321-S6**

FORWARD DIRECTION

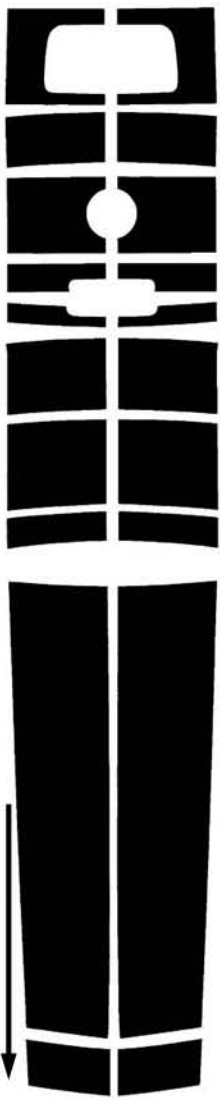

- ◀ TAG PANEL
- ◀ ABOVE TAG
- ◀ TAIL PANEL
- ◀ BRAKE LIGHT
- ◀ WING REAR
- ◀ WING TOP
- ◀ TRUNK
- ◀ TRUNK
- ◀ HOOD
- ◀ BUMPER TOP

**NOTE:**  
STRIPES MUST BE SEPERATED.  
INSTALL ONE SIDE AT A TIME.

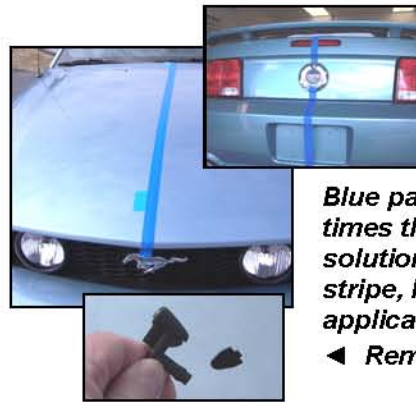

◀ Stripes are designed to have a 1 1/2" space. After cleaning and wax removal is complete make the center space using 1 1/2" tape.

Blue painters tape works best. Some times the tape will loosen after the wetting solution is squeegee from under the first stripe, but the tape can be replaced for the application of the second stripe.

◀ Remove window washer jets.

Squeegee the stripe from the center of the stripe to the edges starting mid way up on the hood.



◀ Finish the wrap around areas after removing the application top tape on hood and trunk areas. As the wetting solution starts drying the stripe will stick.




◀ Remove satellite antenna if used on your model. Stripes are installed without removing spoiler.

**NOTE:** Top spoiler stripes do not finish to trunk lid. SEE (AA) in photo at left.

These sections overlap and need to be installed in the following order:

1. Tail Panel 2. Brake Light 3. Spoiler rear
4. Spoiler Top 5. Trunk Top
6. Bumper Top 7. Tag Section

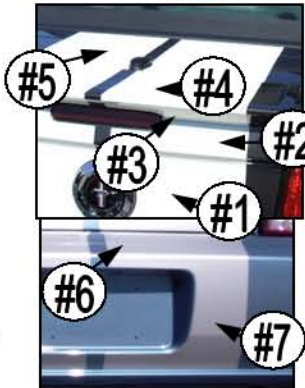

Sections 1, 2, 3 and 7 ▶  
Cut out top paper tape for placement around medallion, brake light and tag areas before installing.

